

INSTRUCTION MANUAL

LM-B011



Max. 50 KG



Never leave your child unattended!

READ THIS INSTRUCTION CAREFULLY!

Despite careful editing it is not possible to completely rule out printing errors or changes to product specifications at short notice. The pictures in this manual are indicative in nature and may vary from the actual product. In any case refer to the actual product. The swing and its components may be subject to product improvements. Thus, there can be changes in design, manufacturing or construction without prior notification once all regulations and tests have been fully passed.

WARNINGS

WARNING! This product is not suitable for children under 36 months. It is only suitable for children between the ages of 3 years and 12 years with a maximum weight of 50 kg.

WARNING! Adult supervision!

WARNING! Adult assembly only!

WARNING! Only up to one child at the same time.

WARNING! For domestic use only!

WARNING! Contains small parts. Choking hazard!

WARNING! Use only outdoors (on grass only)

WARNING! This product is for private use at home only and must never be used in parks and public gardens, in schools, camp sites, hotels, public leisure areas, etc.

WARNING! The swing should be set up on a flat surface and keep a safety distance of 2 meters away from other objects (wall, fences, trees, washing lines, electric cables, etc.) to avoid severe injuries.

WARNING! The swing must not be set up over hard surfaces such as concrete, asphalt or other hard surfaces. We recommend installation over grass or other soft surfaces.

WARNING! The swing must be embedded firmly into the ground. Please follow the instructions carefully for doing so. Only use this product when the concrete is dry.

WARNING! Anchors should be placed level with or below ground level in order to reduce tripping hazards. Fasten the anchors securely.

WARNING! The anchors must be checked regularly in addition to the hooks and fixtures.

WARNING! Check the anchors regularly.

WARNING! Do not allow children to play with the packaging.

WARNING! Fall danger!





 
 

 




 








ASSEMBLY

Please follow the assembly instructions exactly as given


- The assembly of the product must be carried out by an adult under careful consideration of the assembly instructions. Failure to follow the instructions in the assembly instructions may result in damage to the product and accidents to the user. The manufacturer cannot be held responsible for this.
- Keep the instructions for future reference. This can be particularly useful for identification of parts if any after sales service is required.
- We advise that the swing is not faced towards the sun.
- Before usage check that none of the parts are missing. If you find that you are missing a part, please contact our customer service.
- Dispose of packaging thoughtfully.
- Do not allow children to play with the packaging.

FIXING INTO THE GROUND

- Assemble the swing completely and place it in the desired place.
- Locate and mark the position for the sealing legs.
- Check the dimensions showed on the diagram and correct if necessary.
- Under the four feet, mark a square of 300x300mm and dig a 350mm deep hole.
- Fill these holes with concrete following the diagram of the recto. The top of the concrete should not exceed ground level.
- Place the sealing legs in the concrete in the located place (see point 2). Make sure the drilled end of the sealing legs is above the level of the concrete.
- Once the concrete is set, screw the feet into the sealing legs.
- Ensure that the concrete is completely dry before using the swing
- Cover the concrete with soil. **We strongly advice checking this anchoring periodically.**

 
 (YD2) X4	 (S16) X2	 (C40) X1	 (D3) X2
 (S8) X4	 (S9) X4		
 (YBB5) X2	 (BH12) X1		
 (K10K13) X1	 (X2) X2	 (S5) X4	
 (A4) X2	 M6*50 (Z2) X8	 M8*55 (Z3) X8	
 M8*60 (Z6) X4	 M6 (G1) X9	 M8 (G2) X15	
 M6 (D6) X10	 M8 (D8) X16	 M6 (L6) X10	 M8 (L8) X14

1

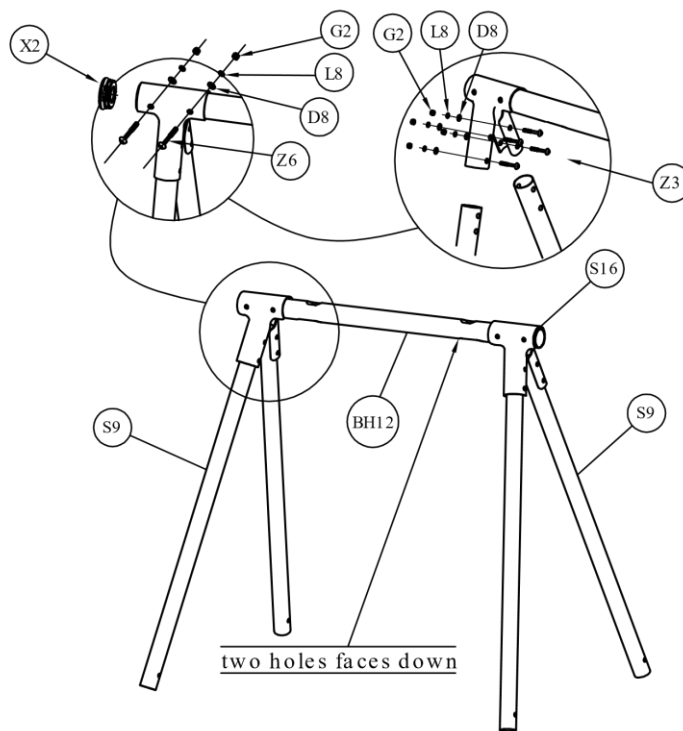 


- (BH12) X 1
- (S16) X 2
- (S9) X 4
- (Z3) X 8
- (Z6) X 4
- (G2) X 12
- (L8) X 12
- (X2) X 2

2

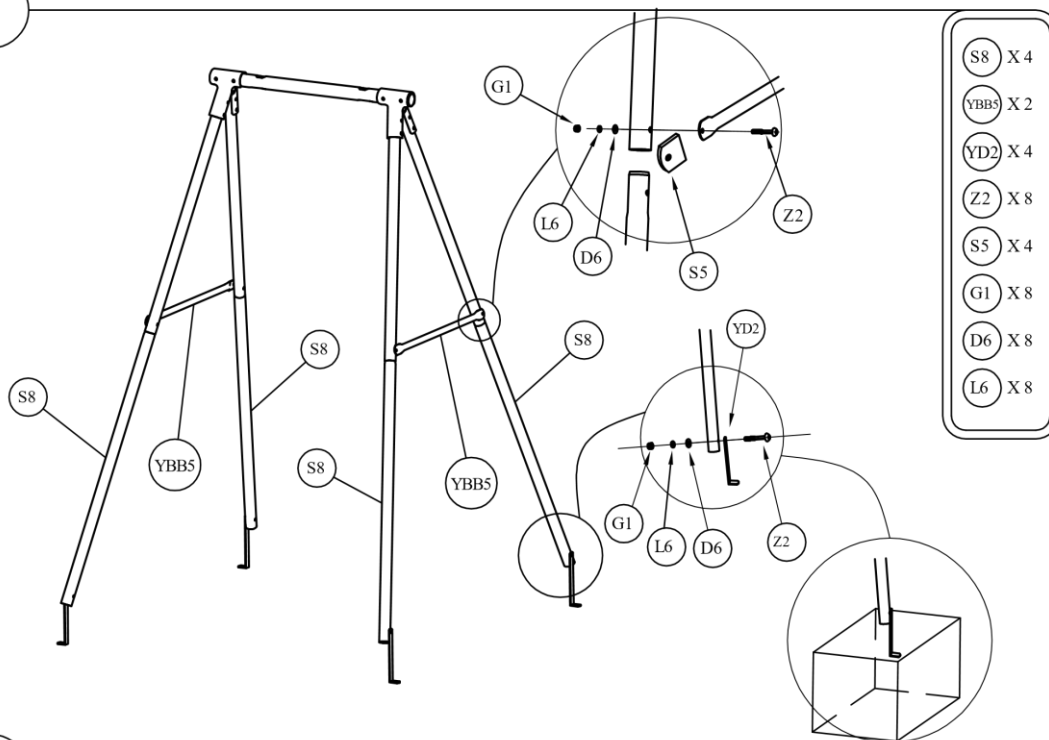

3

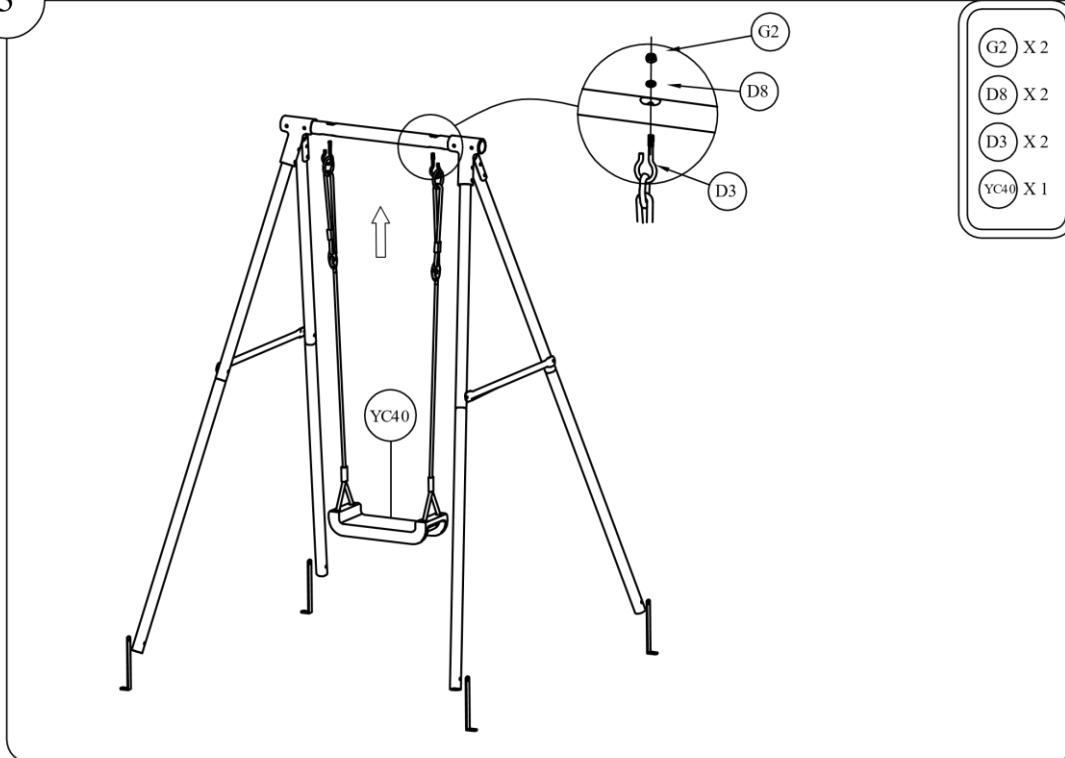

MAINTENANCE

All metal parts are galvanized steel and powder coated for rust protection: however, in certain areas close to the sea we advise that additional rust prevention treatment may be necessary.

The surfaces of all the parts should be checked at least once a month, especially for the fixtures such as hooks on the overhead beam. If the fixtures and hooks show wear over 10% of their original thickness, then they should be replaced with the same fixtures as those originally provided. All parts that are under constant friction should be oiled regularly with a suitable lubricant.

To check all nuts and bolts for tightness and tighten when required.

To check all coverings for bolts and sharp edges and replace when required.

Swing may collapse or be dangerous if they are not checked regularly.

The ground on which the product is placed should be controlled regularly. All elements such as stones or other objects that could cause injury in the case of a fall should be removed.

It is advised to remove the swing during the winter period, when not in use, to avoid any deterioration due to bad weather conditions.

Check for signs of wear, especially where swinging apparatus plastic ring attached to the metal swing hooks on the upper beam. As soon as the plastic ring shows signs of deterioration, the part should be replaced.

All used apparatus and/or parts must be replaced by a part delivered by our customer service, or by any approved realter.

If any modifications made by consumer to the original swing shall be carried out according to the instructions of the manufacturer

Sand rusted areas and tubular members and repaint using a non-lead-based paint when required.

Check swing seat, chains, ropes and other means of attachment for evidence of deterioration.

PRACTICAL ADVICE

Safety

Safety checks should be carried out regularly on this product. These checks should include, if necessary, removing any sharp edges, replacing missing screw covers and tightening the nuts and bolts. These checks should be done to avoid any danger or upturning of the swing set through normal wear and tear.

Comfort

If the swing develops a squeak apply a suitable gel lubricant. Do not use liquid lubricant as it will run down the fixings and apparatus.

The height of the swing can be adjusted using the plastic eyelet fixtures. By pulling the rope through the fixture, the height of seat can be adjusted to suit the user.

The dimensions given are indicative only, they may vary according to the assembly method.

The swing must be used under adult supervision.

Keep any additional components, they may be useful for later operation of maintenance.

When a child is playing on the device, other children cannot run in the area of movements of elements to impact.

CAUTION! Fall danger.