


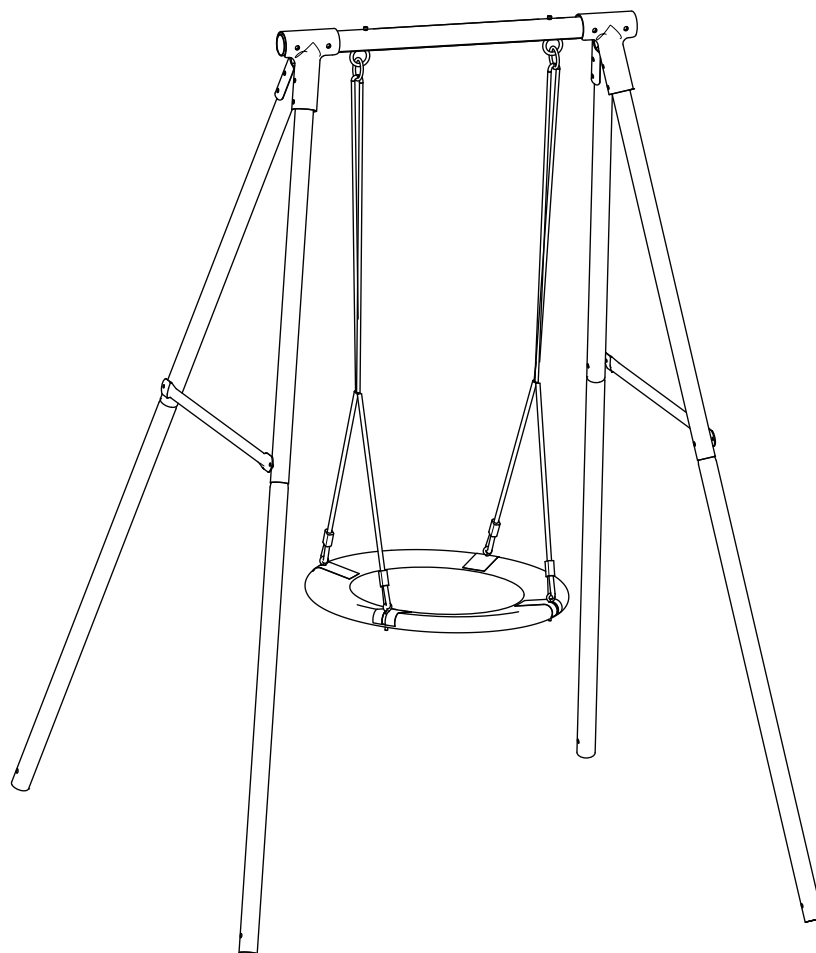


 

















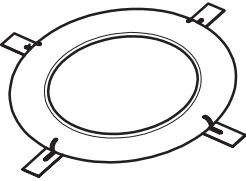

INSTRUCTION MANUAL

LM-B012




WARNING: ONLY FOR DOMESTIC OUTDOOR USE.

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY


 YD2 X4	 S16 X2	 D4 X2	
 S8 X4	 S9 X4		
 YBB5 X2	 BH12L X1		
 K10K13 X1	 X2 X2	 S5 X4	
 A4 X2	 M6*50 Z2 X8+1	 M8*55 Z3 X8+1	
 M8*60 Z6 X4	 M6 G1 X8+1	 M8 G2 X18+2	
 M6 D6 X8+2	 M8 D8 X18+2	 M6 L6 X8+2	 M8 L8 X16+2
 P11 x 4	 P12 x 1		
 P13 x 2			

1

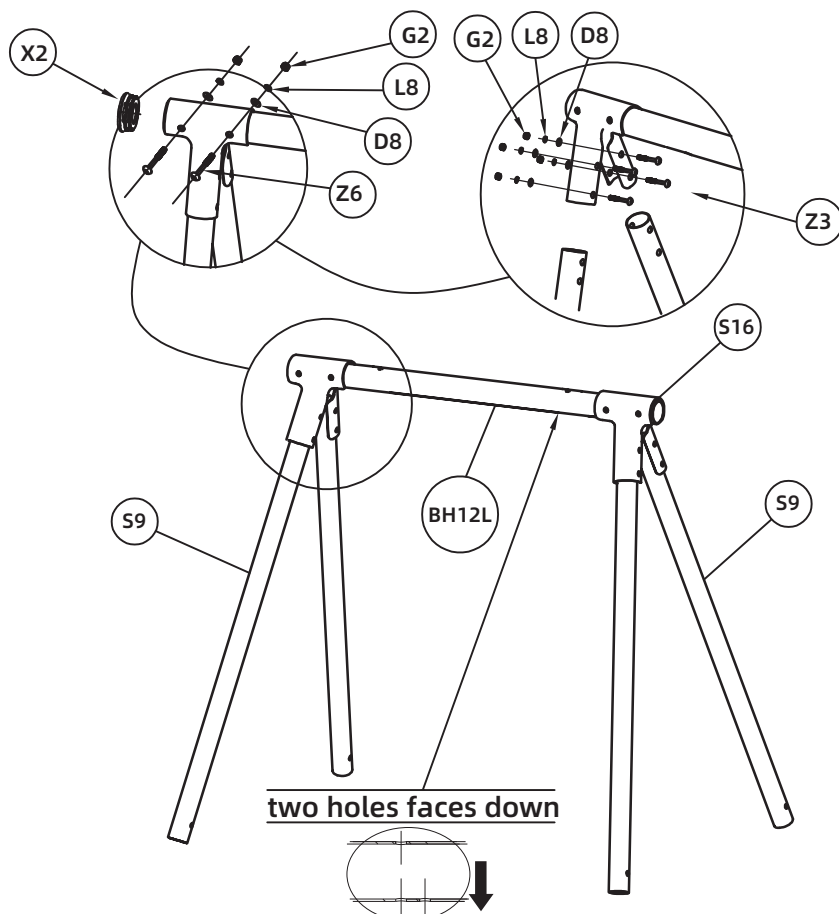


BH12L X 1
 S16 X 2
 S9 X 4
 Z3 X 8
 Z6 X 4
 G2 X 12
 L8 X 12
 D8 X 12
 X2 X 2

2

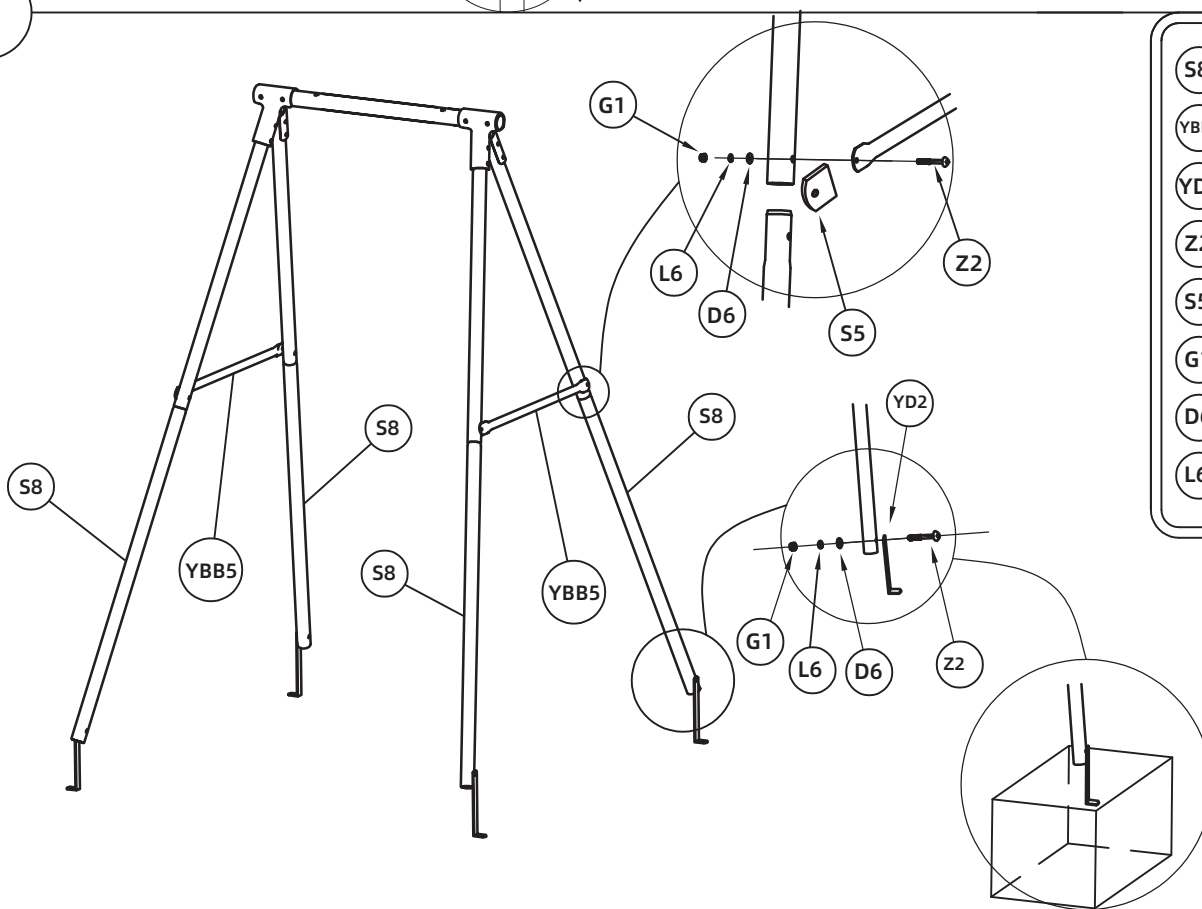

S8 X 4
 YBB5 X 2
 YD2 X 4
 Z2 X 8
 S5 X 4
 G1 X 8
 D6 X 8
 L6 X 8

3

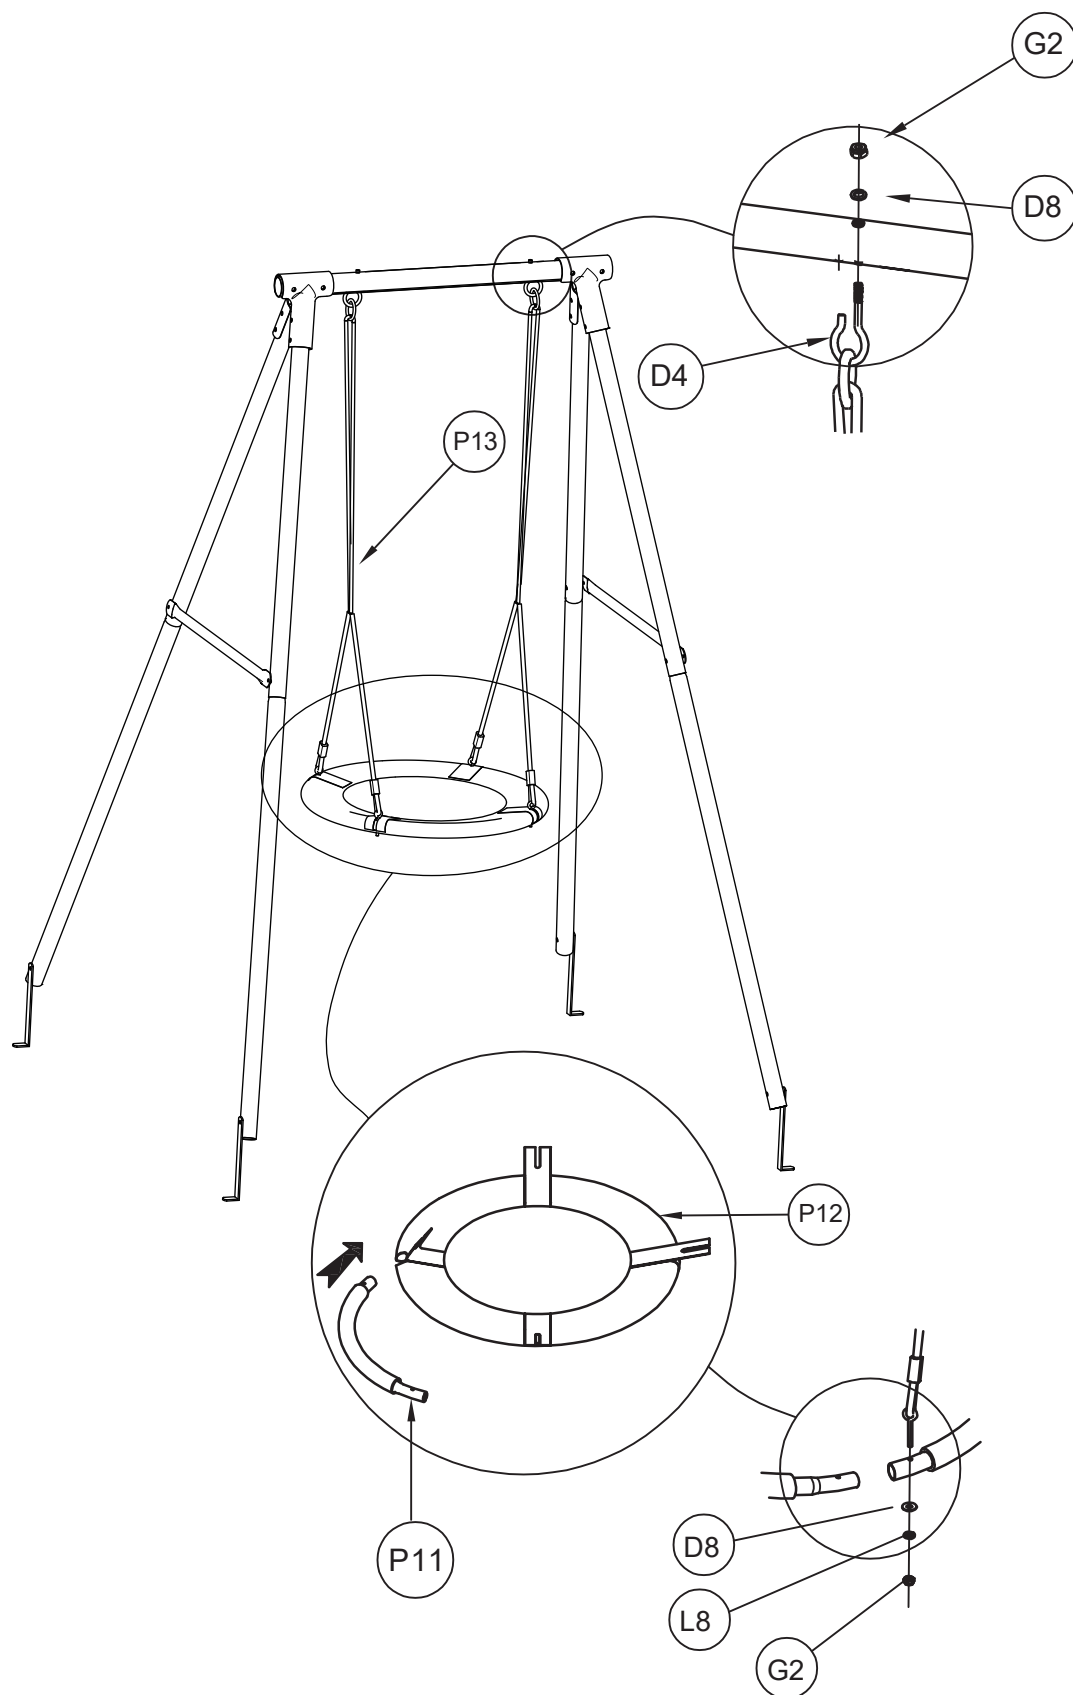

ASSEMBLY INSTRUCTIONS

To be retained for future reference.

WARNING: Only for domestic outdoor use.

Dear Customer,

To guarantee safety, please give special attention to the assembly, safety, and care instructions detailed in this document.

ASSEMBLY ADVICE

Please follow the assembly instructions exactly as given.

1) This product must be assembled by an adult. 2 adults recommended for assembly.

2) Keep a copy of your assembly instructions for future reference. This can be particularly handy for identification of parts if any after sales service is required.

3) For safe use, the minimum distance from the bottom of the swing seat to the ground must be 35cm.

4) We advise that the swing set is not faced towards the sun.

5) Before commencing, check that none of the parts are missing.

6) Dispose of packaging responsibly.

7) Do not allow children to play with packaging.

8) The highest hanging point of the swing shall not exceed 2500 mm/8 ft.

SAFETY ADVICE

1) This product must not be used by children under the age of 36 months. It is suitable only for children between the ages of 3 and 12 years with a maximum weight of 50kg. It must be used under adult supervision.

2) Only one child may safely use the equipment at any one time.

3) As this product contains small parts that could become a choking hazard if swallowed, please keep parts away from children.

4) This product is only for private use at home and must never be used in parks and public gardens, in schools, camp sites, hotels, public leisure areas, etc.

5) The swing set should be set up on a flat surface 2 meters away from all other objects, structures or obstacles (walls, fences, trees, washing lines or electric cables etc.) that could cause injury during use.

6) This product must not be set up over hard surfaces such as concrete, asphalt or other hard surfaces. We recommend installation over grass or other such soft surfaces. Shredded bark mulch, wood chips, fine sand or fine gravel are considered to be acceptable shock-absorbing surfaces when installed and maintained at a sufficient depth under and around playground equipment. However, each material is only effective when properly maintained. Material should be checked periodically and replenished to maintain correct depth as determined necessary for your equipment, otherwise serious injuries may occur from a fall.

7) This swing set must be embedded firmly into the ground. Please follow the instructions carefully for doing so. Only use this product when the concrete is dry.

8) Anchors should be placed level with or below ground level in order to reduce tripping hazards.

9) The anchorage must be checked regularly, in addition to the hooks and fixtures.

10) Do not allow reckless playing, such as jumping off, standing on seats, climbing ropes, twisting ropes, or looping ropes over the support bar.

11) Do not allow children to climb or play on the product whilst the product is wet as slips or falls may occur.

12) Do not allow loose, hooded, or baggy clothes to be worn since children can get trapped and may be unable to free themselves.

13) Do not attach items to the equipment that are not specifically designed for use with this product, such as, but not limited to skipping ropes and chains as they may cause strangulation hazards.

FIXING INTO THE GROUND

1) Assemble the swing set completely and place it in the desired position.

2) Locate and mark the position for the four support legs.

3) Under each leg, mark a square of 350 X 350 mm and dig a 350 mm deep hole.

4) Fill these holes with concrete following the diagram of step 2 in the instruction. The top of the concrete should not exceed ground level.

5) Place the support legs in the concrete in the located place (see point 2). Make sure the drilled end of the support legs is above the level of the concrete.

6) Once the concrete is set, screw the feet into the support legs.

7) Ensure that the concrete is completely dry before using the swing.

8) Cover the concrete with soil. We strongly advise checking this anchoring periodically.

MAINTENANCE

- 1) All metal parts are galvanized steel and powder coated for rust protection; however, in certain areas close to the sea we advise that additional rust prevention treatment may be necessary.
- 2) The surfaces of all the parts should be checked at least once a month, especially for the fixtures such as hooks on the overhead beam. If the fixtures and hooks show wear over 10% of their original thickness, then they should be replaced with the same fixtures as those originally provided.
- 3) To check all nuts and bolts for tightness and tighten when required.
- 4) To check all coverings for bolts and sharp edges and replace when required.
- 5) Toys may collapse or be dangerous if they are not checked regularly.
- 6) All parts that are under constant friction should be oiled regularly with a suitable lubricant.
- 7) It is advised to remove the apparatus during the winter period, when not in use, to avoid any deterioration due to bad weather conditions.
- 8) The ground on which the product is placed should be controlled regularly. All elements such as stones or other objects that could cause injury in the case of a fall should be removed.
- 9) Check for signs of wear, especially where the swinging apparatus' steel ring attaches to the metal swing hooks on the upper beam. As soon as the steel ring shows signs of deterioration, the apparatus should be replaced.
- 10) All used apparatuses and/or parts must be replaced by a part delivered by our after sales service, or by an approved retailer.
- 11) Any modifications made by the consumer to the swing set shall be carried out according to the instructions of the manufacturer.
- 12) Rusted areas should be repainted using a non-lead based paint when required.
- 13) Check swing seats, chains, ropes and other means of attachment for evidence of deterioration.

PRACTICAL ADVICE

Frequent questions and observations

SAFETY

Safety checks should be carried out regularly on this product. These checks should include, if necessary, removing any sharp edges, replacing missing screw covers, and tightening the nuts and bolts. These checks should be done to avoid any danger or upturning of the swing set through normal wear and tear.

COMFORT

- 1) If the swing set develops a squeak apply a suitable gel lubricant. Do not use liquid lubricant as it will run down the fixings and apparatus.
 - 2) The height of the swing can be adjusted using the plastic eyelet fixture. By pulling the rope through the fixture, the height of the seat can be adjusted to suit the user. The dimensions given are indicative only, they may vary according to the assembly method.
 - 3) This Swing Set must be used under adult supervision.
 - 4) Keep any additional components, they may be useful for later operation or maintenance.
 - 5) When a child is playing on the swing, other children must not run in the area of movement in case of impact.
- CAUTION! Fall danger

